All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidential or indirect damages.

Installation Manual
INE-W928R Kit

colour: black

- Seat Alhambra (6N)
- Škoda Fabia II
- Škoda Octavia II
- Škoda Roomster
- VW Caddy
- VW Sharan
- VW Tiguan
- VW Touran

part-no.:
KIT-8VWT
KIT-8VWTD

Compatible with these Alpine navigation devices

INE-W928R

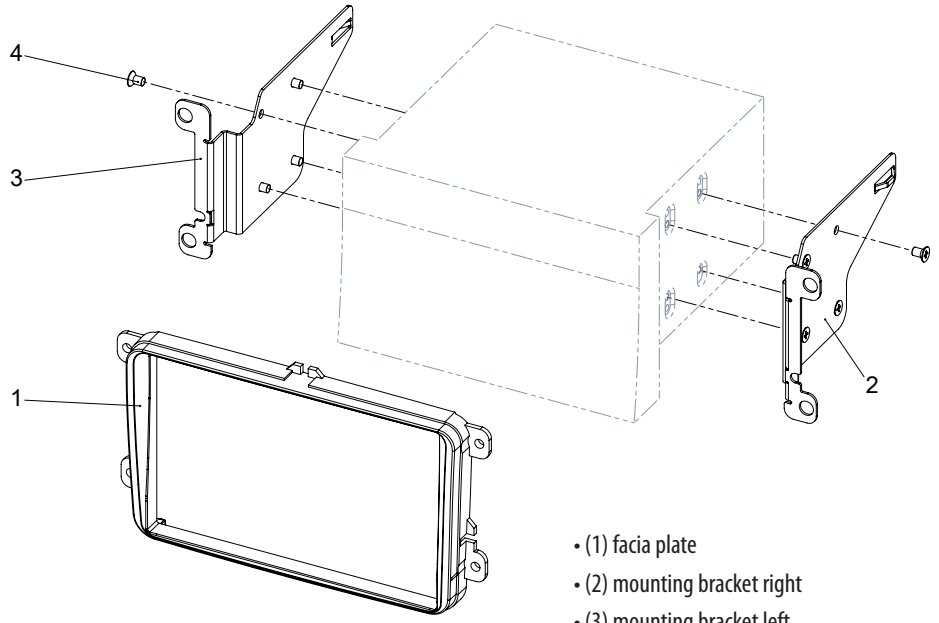

- (1) facia plate
- (2) mounting bracket right
- (3) mounting bracket left
- (4) recessed countersunk flat head screw

Škoda Fabia II / Octavia II / Roomster / VW Caddy / Touran

1. Unclip and remove OEM panel (see arrows)

2. Remove 4 screws

   Remove head unit

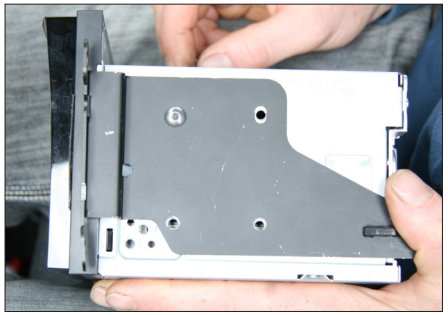

3. Attach mounting frames to Alpine INE-W928R

4. Connect all requred circuit points

   Place Alpine INE-W928R on dashboard

VW Tiguan

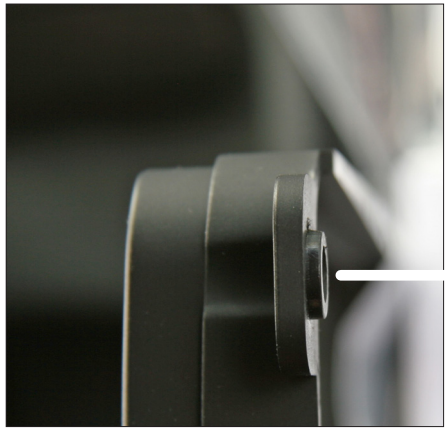

5. Connect all requred circuit points
   Place Alpine INE-W928R on dashboard

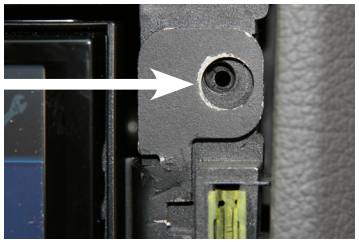

Place facia plate
Put dome of facia plate exactly over the holes of mounting frames (see arrow above)

Install OEM panel to finish installation

VW Tiguan

1. Unclip and remove OEM panel (see arrows)

   Remove 4 screws of OEM head unit

2. Remove 4 screws

   Remove head unit

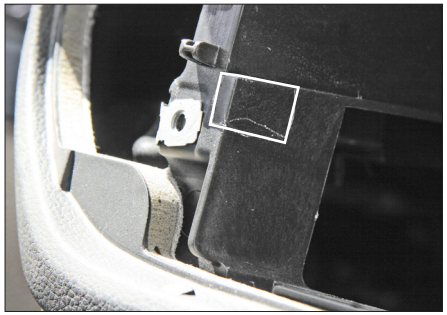

3. Cut away plastic to clear space for Alpine INE-W928R

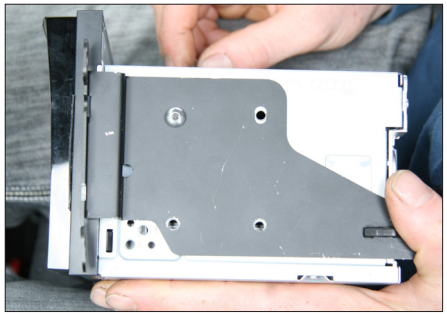

4. Attach mounting frames to Alpine INE-W928R

Škoda Fabia II / Octavia II / Roomster / VW Caddy / Touran

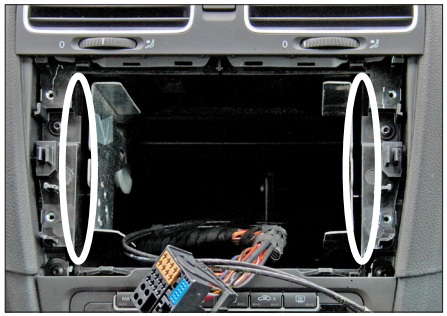

5. **If necessary**:
   Cut away plastic to clear space for Alpine INE-W928R

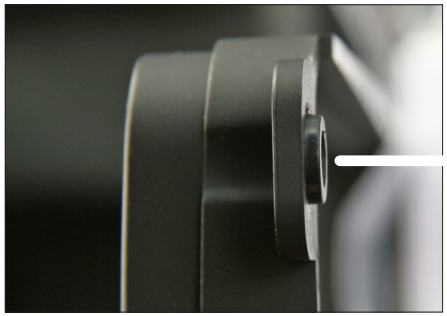

6. Place facia plate

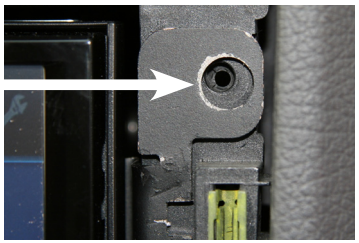

Put dome of facia plate exactly over the holes of mounting frames (see arrow above)

Fix facia plate with 4 screws

7. Install OEM panel to finish installation

Seat Alhambra / VW Sharan

1. Open top shelf

   Remove 2 screws

2. Remove top shelf inlay

   Remove 2 screws on top

3. Remove OEM panel

Seat Alhambra / VW Sharan

4. Remove 4 screws

   Remove OEM head unit

   If necessary:
   Cut away plastic to clear space for Alpine INE-W928R

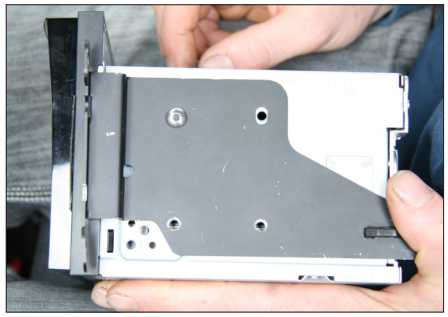

5. Attach mounting frames to Alpine INE-W928R

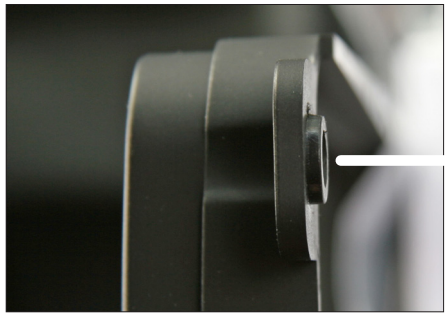

6. Place facia plate

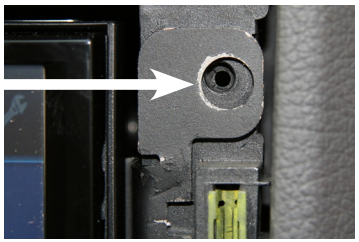

7. Connect all requred circuit points
   Place Alpine INE-W928R on dashboard

   Fix facia plate with 4 screws
   Install everything in reverse order to finish installation

APF-D100VW Volkswagen SWRC & Display Interface

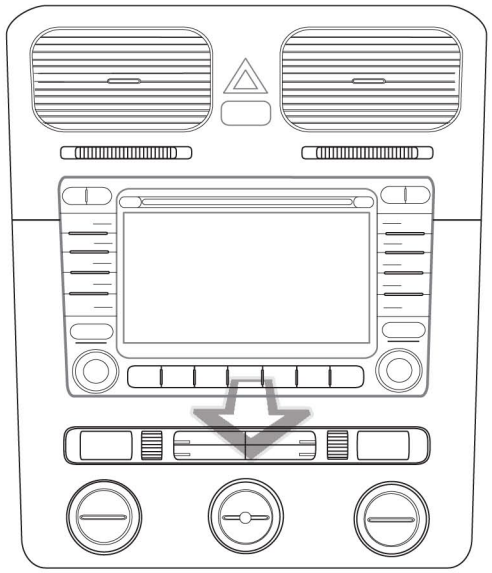

System Controls Type 1

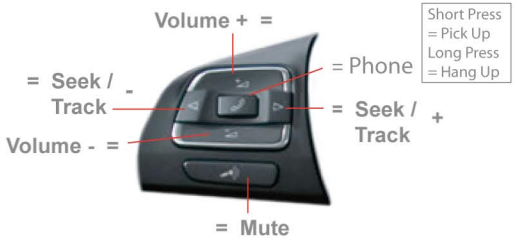

System Controls Type 2

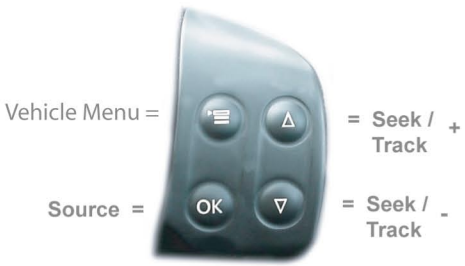

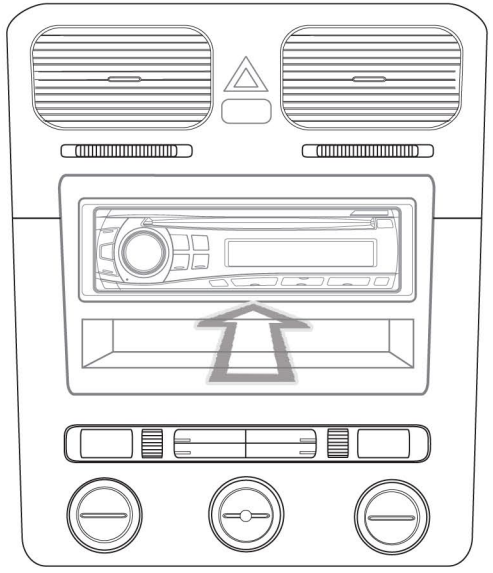

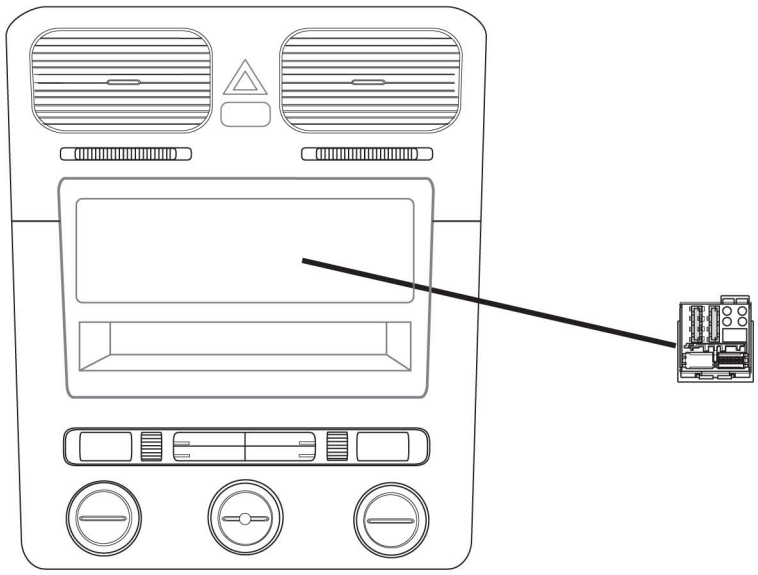

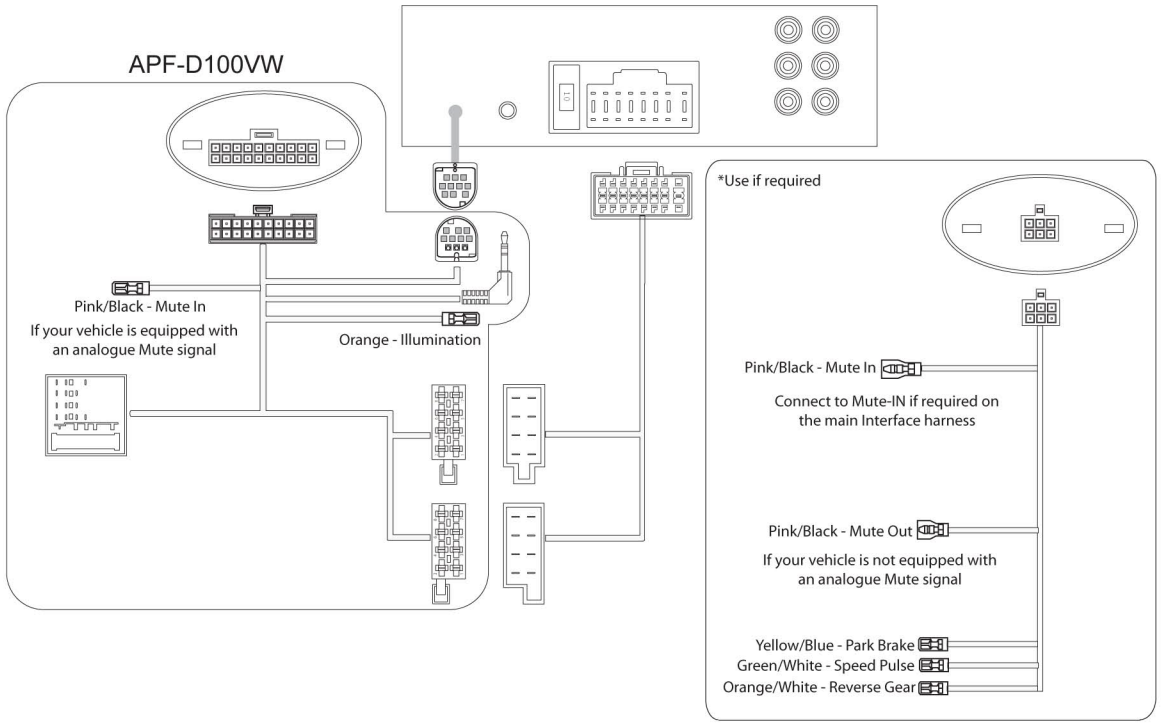
APF-D100VW
Pink/Black - Mute In
If your vehicle is equipped with an analogue Mute signal
Orange - Illumination
*Use if required
Pink/Black - Mute In
Connect to Mute-IN if required on the main Interface harness
Pink/Black - Mute Out
If your vehicle is not equipped with an analogue Mute signal
Yellow/Blue - Park Brake
Green/White - Speed Pulse
Orange/White - Reverse Gear